

Installation guide

MODERNO Firepit



Assembly :

24 blocks


Fireguard (4 pieces and 6 rods)

STEP 1




Level your surface with 0-3/4" stone.
The total exterior dimension of your firepit
will be 46" x 46".

STEP 2

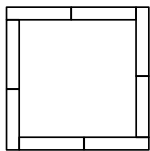

Put 8 blocks in a square
shape to make the 1st row.

STEP 3



Place 8 blocks, crossing the joints
to make the 2nd row.


STEP 4



Place 8 blocks crossing the joints to
make the 3rd row.


You can add 1 or 2 rows of blocks to
increase the height of your firepit.
**However, it is very important to fill the
bottom of the firepit so the blocks
are not exposed.**

STEP 5

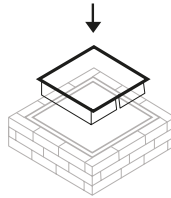


Insert the 2 parts of the inner tub.

STEP 6

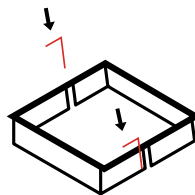


Insert the 2 rods to join the 2 parts
of the inner tub together.

STEP 7

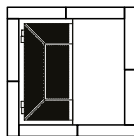


Put the fireguard on
the left side on top
of the tub.

STEP 8

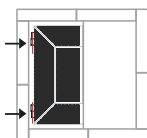


Insert the 2 rods
to attach the left
fireguard to the tub.

STEP 9

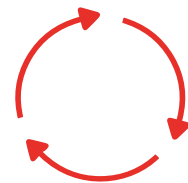

Repeat steps 7 and 8 for the right side.

STEP 10

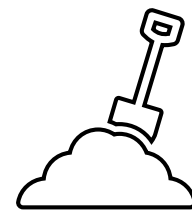

Fill the bottom of the firepit with
sand or gravel up to the tub.

**** The blocks must not be in direct
contact with the flame ****



Watch the installation video :
<https://www.patiodrummond.com/produits/foyer-moderno/>

CAUTION

- Sprinkling the blocks with water after making a fire can cause thermal shock resulting in damage.
- This fireplace is designed for ambient fires.