

INSTALLATION GUIDE

MODERNO FIREPLACE - DIMENSIONS 42" X 42"



scan the code to view
the **MODERNO**
fireplace installation
video

WARNING

Dousing the blocks with water following a fire can cause thermal shock, resulting in damage. This fireplace is designed for ambient fires.




Repeat steps 10 and 11
for the other side.

Insert the two pins to
secure the spark
arrestor.

Place one side of spark
arrestor on the top of
the tank..

Optional: Remove
cooking grill

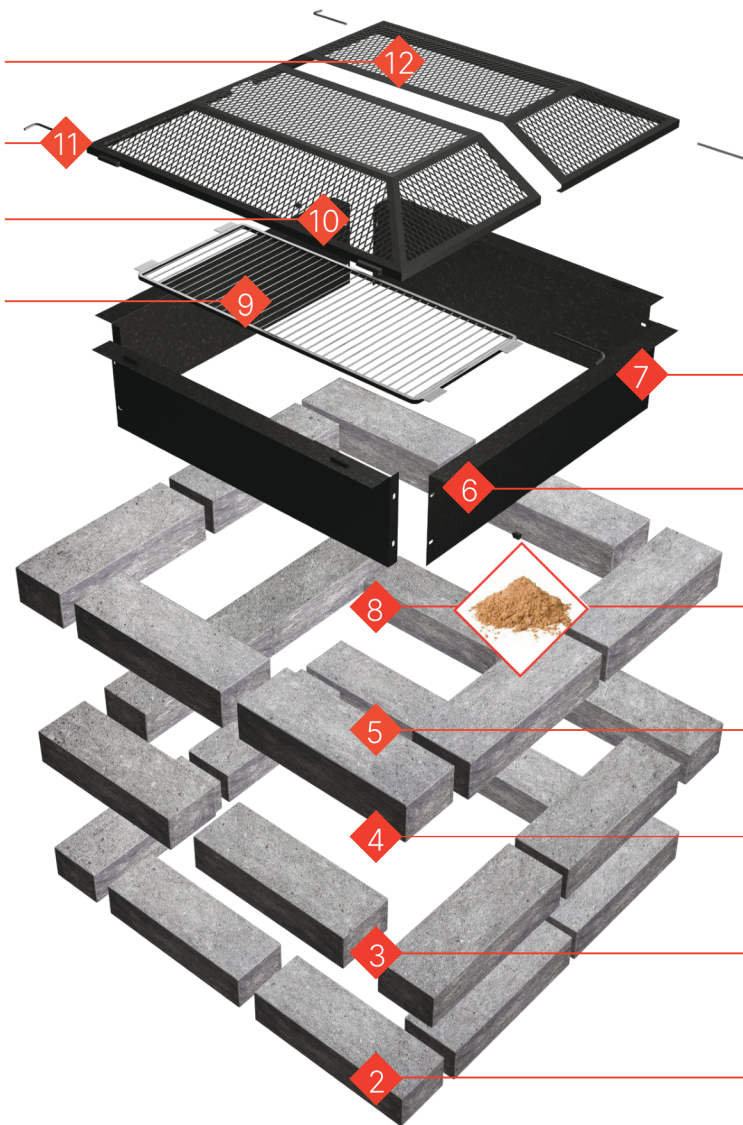

Insert the spark arrestor
tank into the fireplace.

Insert the 8 screws to join
the 4 parts of the inner
tank together before
inserting the tank into the
fireplace.

Add sand to the bottom of
the firebox up to the tank
to protect the blocks from
the flames.

Optional: add 1 or 2 rows
for a higher hearth.

Place 8 blocks, crossing
the joints to make the 3rd
row.

Place 8 blocks, crossing
the joints to make the 2nd
row.

Place 8 square-shaped
blocks to make the 1st
row.

Level your surface
with 0-3/4" stone.

